

# Manual Gas Fireplace

## Which fireplace do I have?

By looking at the type of remote control, you can determine which gas fireplace you have.

### Fireplace type 1

Remote control with 4 buttons

→ Go to manual 1



### Fireplace type 2

Remote control with 2 buttons

→ Go to manual 2



# Manual fireplace type 1

## Remote Control

Your remote control may look different, but the operation is the same.

**We kindly ask you not to place the remote control on the gas fireplace!**

## Turn the fireplace on

**Step 1** - On the remote control, hold down the 'OFF' button and the 'Big flame' button (see picture) at the same time.

**Step 2** - As soon as you hear the gas fireplace begin to beep, you can release the buttons. This means that the ignition process has started.

**Step 3** - You will then hear a "TIK" sound. The pilot light is now ignited. Using the "Big flame" button, you can now turn on the fireplace.




You can leave the gas fireplace on the pilot light at all times.

## The fireplace won't start, what to do?

If you have followed the above steps and the gas fireplace does not light, you can try the following things:

- Check that the gas valve under the gas fireplace is open. It should be parallel to the pipe.
- Under the gas fireplace you will see the control panel on the right side. Buttons A and B should be set to "ON" (see picture below). Then repeat the steps above to try again.

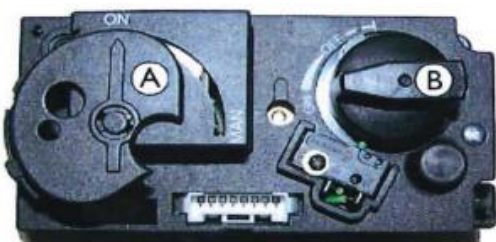

**Is the gas fireplace still not working? Then stop by the reception desk (within opening hours) or contact us.**

# Manual fireplace type 2

## Remote control

We kindly ask you not to place the remote control on the gas fireplace!

## Turn the fireplace on

**Step 1** - Under the gas fireplace is the control panel (see photo). You can open the flap on the front by pressing it.



**Step 2** - Set both buttons as shown in the picture above. So '**Button A**' on the tip and '**Button B**' on the 'flame'.

**Step 3** - Press "**Button A**" and turn the knob to the right. Hold down the knob for 5-10 seconds.

**Step 4** - Then turn '**Button A**' to the right for the large flame. The gas fireplace should now turn on. You can now use the remote control to continue operating the gas fireplace from this point on.

You can leave the gas fireplace on the pilot light at all times.

## The fireplace won't start, what to do?

If you have followed the above steps and the gas fireplace does not light, you can try the following things:

- Check that the gas valve under the gas fireplace is open. It should be parallel to the pipe.
- Then repeat the steps above to try again.

**Is the gas fireplace still not working? Then stop by the reception desk (within opening hours) or contact us.**