


# Operating manual washing machine

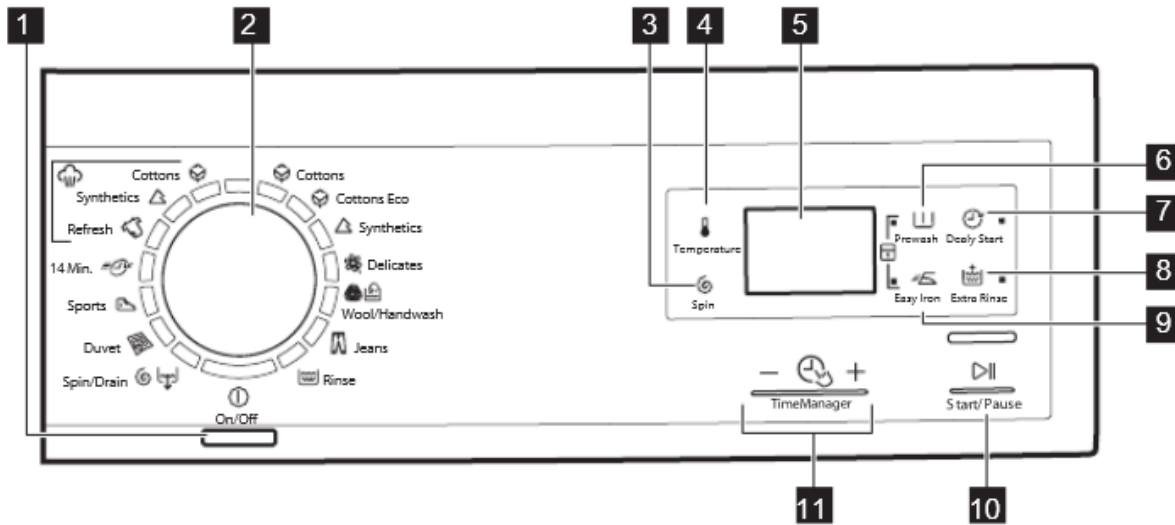


- 1 On Off button 
- 2 Programme knob
- 3 Spin reduction touchpad 
- 4 Temperature touchpad 
- 5 Display
- 6 Prewash touchpad 
- 7 Delay start touchpad 
- 8 Extra rinse touchpad 
- 9 Easy iron touchpad 
- 10 Start pause touchpad 
- 11 Time Manager touchpads -   +

Touch the touchpads with your finger in the area with the symbol or the name of the option. Do not wear gloves when you operate with the control panel. Make sure that the control panel is always clean and dry.

## Starting a programme

- Place your laundry in the machine.
- Add detergent and/or fabric softener.
- Press the on/off button to activate the appliance. A tune sounds then the appliance is activated.
- Turn the programme knob and set the programme.

*The related programme indicator comes on.*


*The indicator of the  flashes.*

*The display show the level of the time manager, the programme duration and the indicators of the programme phases.*



- If necessary, change the temperature, the spin speed, the cycle duration, or add available options.

*When you activate an option, the indicator of the set option comes on.*

- Press  to start the appliance.

*The indicator stops to flash and stays on. The indicator  starts to flash on the display. The programme starts, the door is locked and a key is shown on the display.*

## Ending a programme

*At the end of the programme, an acoustic signal operates. In the display a  comes on. The indicator  goes off. The door lock indicator (the key) goes off as well.*

- You can now remove the laundry from the appliance.
- Press the on/off button several seconds to turn off the washing machine.