

Installing and Using the Product

Please read this manual carefully before operating your set and retain it for future reference. To view the instructions of advanced features, visit <http://www.lg.com> or scan QR code and then download Owner's Manual. Some of the content in this manual may differ from your product.



- (A) Sound bar (C) Wireless Subwoofer - Install it close to the sound bar.
 (B) Remote Control Receiver / Status LED (Refer to below table) (D) External Device - (Blu-ray player, game console, etc.)

Power on	Standby	OPTICAL / HDMI ARC	Bluetooth ready	Bluetooth	LG TV	HDMI IN	USB
Red blinking	Red	White	Blue blinking	Blue	White	White	Green

- 1 Connect the sound bar to your TV via an optical cable or an HDMI cable.
- 2 If you are using an external device (ex. Blu-ray player, game console, etc.), connect it to the sound bar via an HDMI cable.
- 3 Connect to power in the following order: wireless subwoofer → sound bar. Then, turn on the sound bar. When the connection is automatically established with the sound bar, the LED on the wireless subwoofer will light up green.
- 4 Using the product with your TV
 - 1 Press the **Function** (☰) button repeatedly until the first from above LED lights up in white among the three LEDs.
 - 2 On your TV's settings, set the output speaker to [HDMI ARC], [Optical], or [External Speaker].
- 5 Connecting the product to your smartphone via Bluetooth
 - 1 Tap the **Settings** (⚙️) button on your smartphone and select **Bluetooth**.
Turn on the **Bluetooth** function. (Off > On)
 - 2 Press the **Bluetooth pair** (🔗) button. After a moment, the second LED lights up in blue and blinking among the three LEDs.
 - 3 Find and tap the product on your smartphone. The product appears as "LG DS40Q (XX)".
- 6 Connecting to the LG Sound Bar app
 - 1 Find and install the **LG Sound Bar app** on Google Play or App Store from your smartphone.
 - 2 You can get more information regarding its use by selecting [Help] in [Setting].



If you see a red LED on the front of the wireless subwoofer, it means that the sound bar is not connected to the subwoofer. If this is the case, connect them in the following order.

- 1 Press the **Power** (⏻) button on the sound bar to turn it off.
 - 2 Press the **PAIRING** button on the back of the disconnected wireless subwoofer. Check if LED blinks green.
- If you still see a red LED on the front of the wireless subwoofer, press and hold the button on the back of the subwoofer again.
 - 3 Press the **Power** (⏻) button on the sound bar to turn it on.
 - 4 When the connection is established, you will see a green LED light on the front of the wireless subwoofer.
- ⚠️ Keep the sound bar, the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.

- Design and specifications are subject to change without notice.
- Google Play is a trademark of Google LLC.