

# Quickstart guide

NMC330  
Micro set with DAB+

# N|I|K|K|E|I




- (EN) For more information see the extended manual at [www.nikkei.eu](http://www.nikkei.eu)
- (NL) Voor meer informatie zie de uitgebreide handleiding op [www.nikkei.eu](http://www.nikkei.eu)
- (DE) Für weitere Informationen siehe das umfassende Handbuch unter [www.nikkei.eu](http://www.nikkei.eu)
- (FR) Pour plus d'informations, voir le manuel détaillé sur [www.nikkei.eu](http://www.nikkei.eu)
- (ES) Para más información, consulte el manual ampliado en [www.nikkei.eu](http://www.nikkei.eu)
- (IT) Per ulteriori informazioni consultare il manuale completo su [www.nikkei.eu](http://www.nikkei.eu)




## 1 Check the contents

Controleer de inhoud  
Kontrollieren Sie den Inhalt  
Vérifiez le contenu  
Kontroller indholdet  
Controlla i contenuti

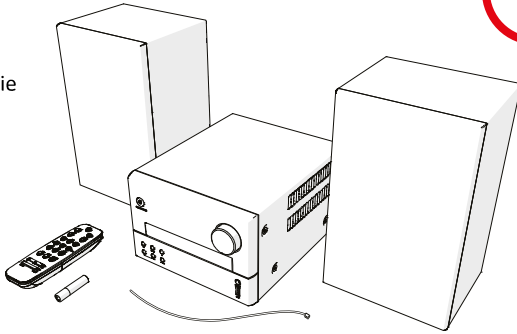

## 2 Main parts



Hoofd onderdelen  
Hauptteile  
Parties principales  
Partes principales  
Parti principali

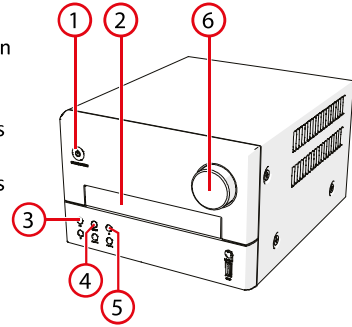

1	Standby/on
2	CD slot
3	Play/pause
4	Input
5	Open/close CD slot
6	Volume

## 3 Insert the batteries and remote control


Plaats de batterijen en afstandsbediening  
Legen Sie die Batterien ein und Fernbedienung  
Placez les piles et télécommande  
Coloque las pilas y mando a distancia  
Inserire le batterie e il telecomando

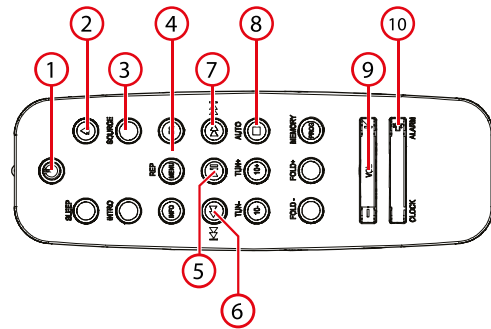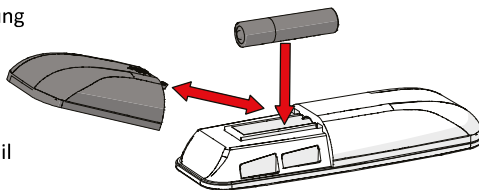

1	On/off
2	Open/close CD slot
3	Source
4	Menu
5	Play/pause
6	Play back
7	Play forward
8	Stop
9	Volume up/down
10	Mute


## 4 Turn on the device

Schakel het apparaat in  
Schalten Sie das Gerät ein  
Mettez l'appareil en marche  
Encienda el aparato  
Accendi il dispositivo

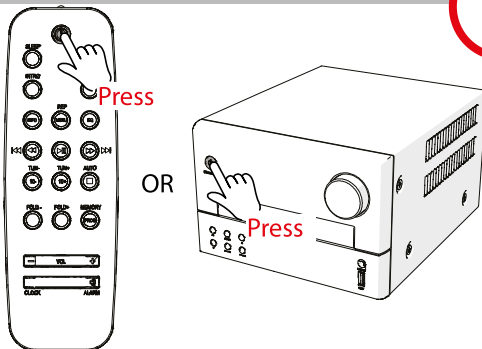



## 5 Connect the components and connect to the mains

Sluit de componenten aan en sluit aan op het lichtnet  
Schließen Sie die Komponenten an und Schließen Sie Netzspannung an  
Raccordez les composants et raccordez au réseau électrique  
Conecte los componentes y conecte a la red eléctrica  
Collegare i componenti e collegare alla rete elettrica


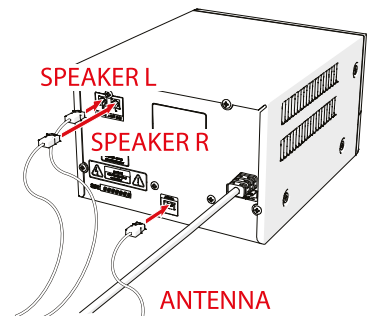


## 6 Source


Place antenna near window and upwards

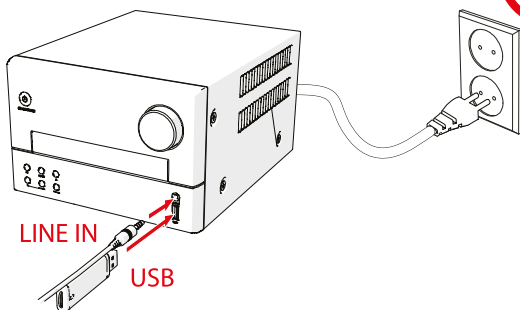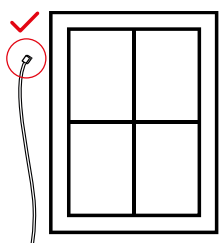


Source  
Source  
Source  
Source  
Source

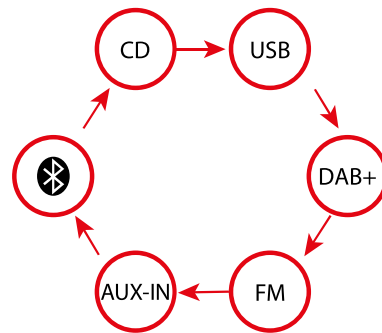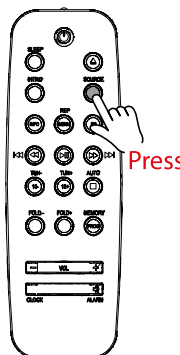


# 7 CD

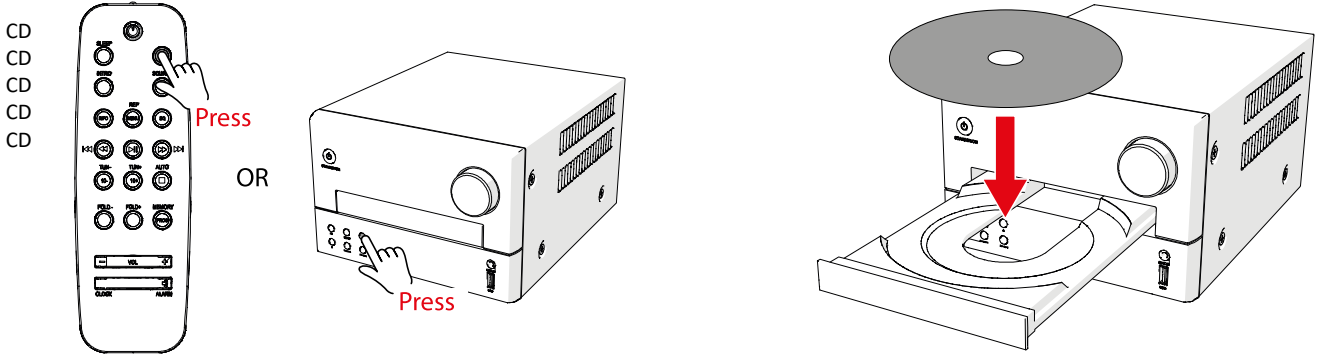


# 8 DAB+

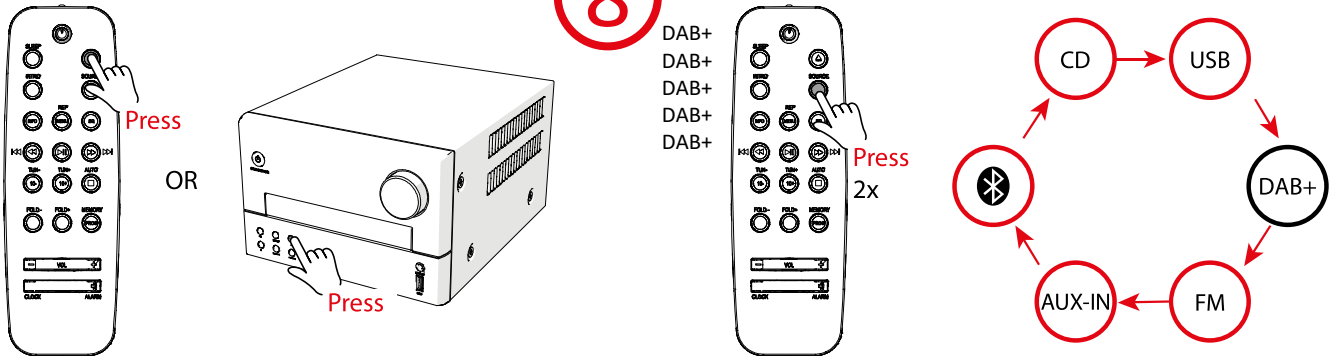

Place antenna near window and upwards

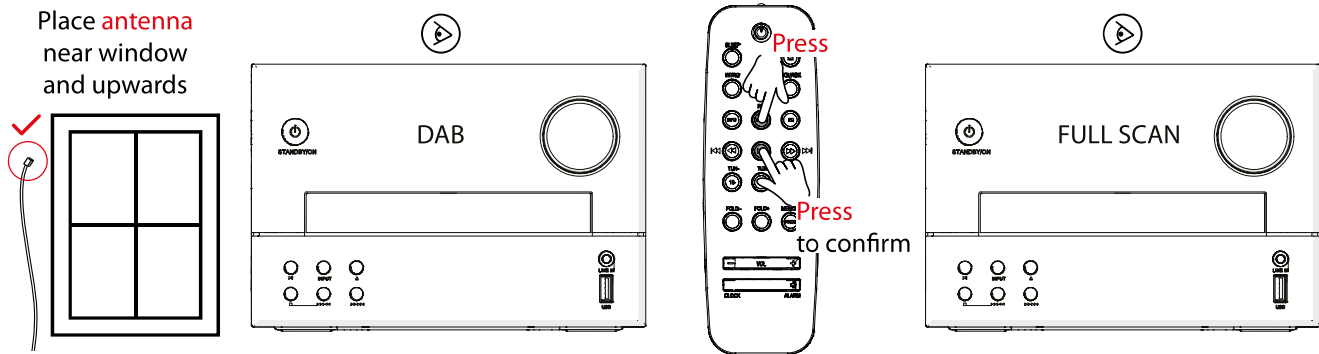

# 9 Turn off the device

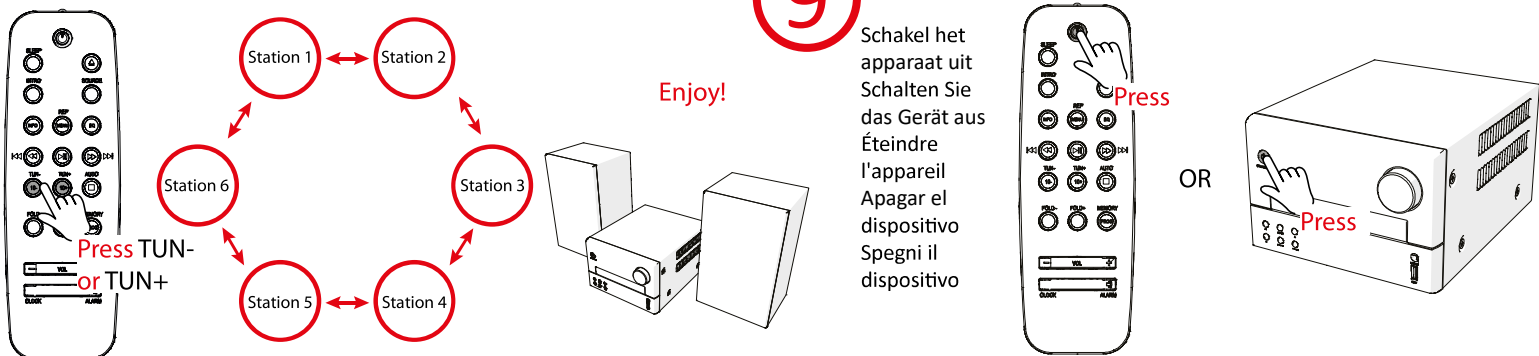

Specifications	Specificaties	Technische Daten	Spécifications	Especificaciones	Specificazioni
Battery: AAA battery (included)	Batterij: AAA batterij (inclusief)	Batterie: AAA Batterie (inbegriffen)	Batterie: pile AAA (fournie)	Bateria: batería AAA (incluida)	Batteria: batteria AAA (inclusa)
Dimensions: 120 x 180 x 229 mm	Dimensies: 120 x 180 x 229 mm	Maße: 120 x 180 x 229 mm	Dimensions: 120 x 180 x 229 mm	Dimensiones: 120 x 180 x 229 mm	Dimensioni: 120 x 180 x 229 mm
Speakers: 2 x 15 Watt RMS (Stereo)	Speakers: 2 x 15 Watt RMS (Stereo)	Lautsprecher: 2 x 15 Watt RMS (Stereo)	Puissance de sortie: 2 x 15 Watt RMS (Stéréo)	Potencia de salida: 2 x 15 vatios RMS (estéreo)	Potenza in uscita: 2 x 15 Watt RMS (Stereo)
LED display	LED scherm	LED Anzeige	Affichage LED	Pantalla LED	Display a LED
Power: 100-240 V, 50-60 Hz	Vermogen: 100-240 V, 50-60 Hz	Leistung: 100-240 V, 50-60 Hz	Puissance: 100-240 V, 50-60 Hz	Potencia: 100-240 V, 50-60 Hz	Potenza: 100-240 V, 50-60 Hz
Media playing formats: CD, CD-R(W), MP3	Mediaformaten: CD, CD-R(W), MP3	Medienwiedergabeformate: CD, CD-R (W), MP3	Formats de lecture des supports: CD, CD-R (W), MP3	Formatos de reproducción de medios: CD, CD-R (W), MP3	Formati di riproduzione multimediale: CD, CD-R (W), MP3
Digital FM tuner, Line-in, USB playback, PLL	Digitale FM tuner, Line-in, USB terugspelen, PLL	Digital FM-Tuner, Line-In, USB-Wiedergabe, PLL	Tuner FM Digital, entrée ligne, lecture USB, PLL	Sintonizador digital de FM, entrada de línea, reproducción USB, PLL	Sintonizzatore FM digitale, Line-in, riproduzione USB, PLL
DAB+ radio	DAB+ radio	DAB + Radio	Radio DAB +	Radio DAB +	DAB + radio
Bluetooth	Bluetooth	Bluetooth	Bluetooth	Bluetooth	Bluetooth